

## CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.


### RECOMMENDATIONS

- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM											
	5m	6m	7m	8m	9m	10m	11m	13m	15m	17m	19m
A1	760	835	900	950	1005	1060	1115	1215	1300	1380	1450
A2	365	400	430	455	485	510	540	585	625	665	700
A3	560	610	660	715	760	800	840	915	980	1045	1100
A4	465	490	530	560	600	630	665	720	770	820	865
A5	360	390	400	410	460	480	500	540	550	610	660
AL1	600	660	710	760	805	850	895	975	1040	1110	1165
AL2	1000	1090	1180	1235	1310	1380	1450	1580	1690	1800	1895
AL3	710	775	835	860	910	960	1010	1100	1170	1250	1315
KL	580	620	670	710	750	790	830	910	970	1030	1090

EDGE V9 5/6M RIGGING DIAGRAM

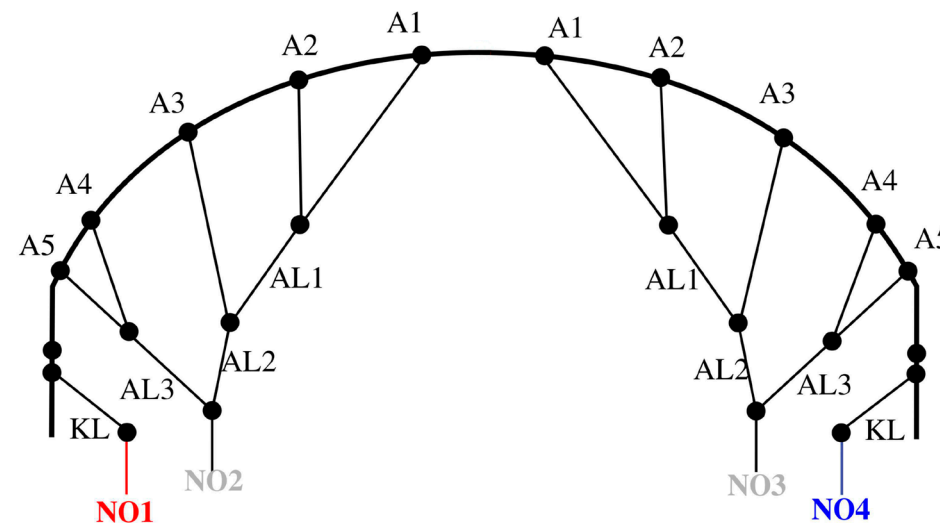

EDGE V9 7/8/9/10/11/13/15/19M RIGGING DIAGRAM

